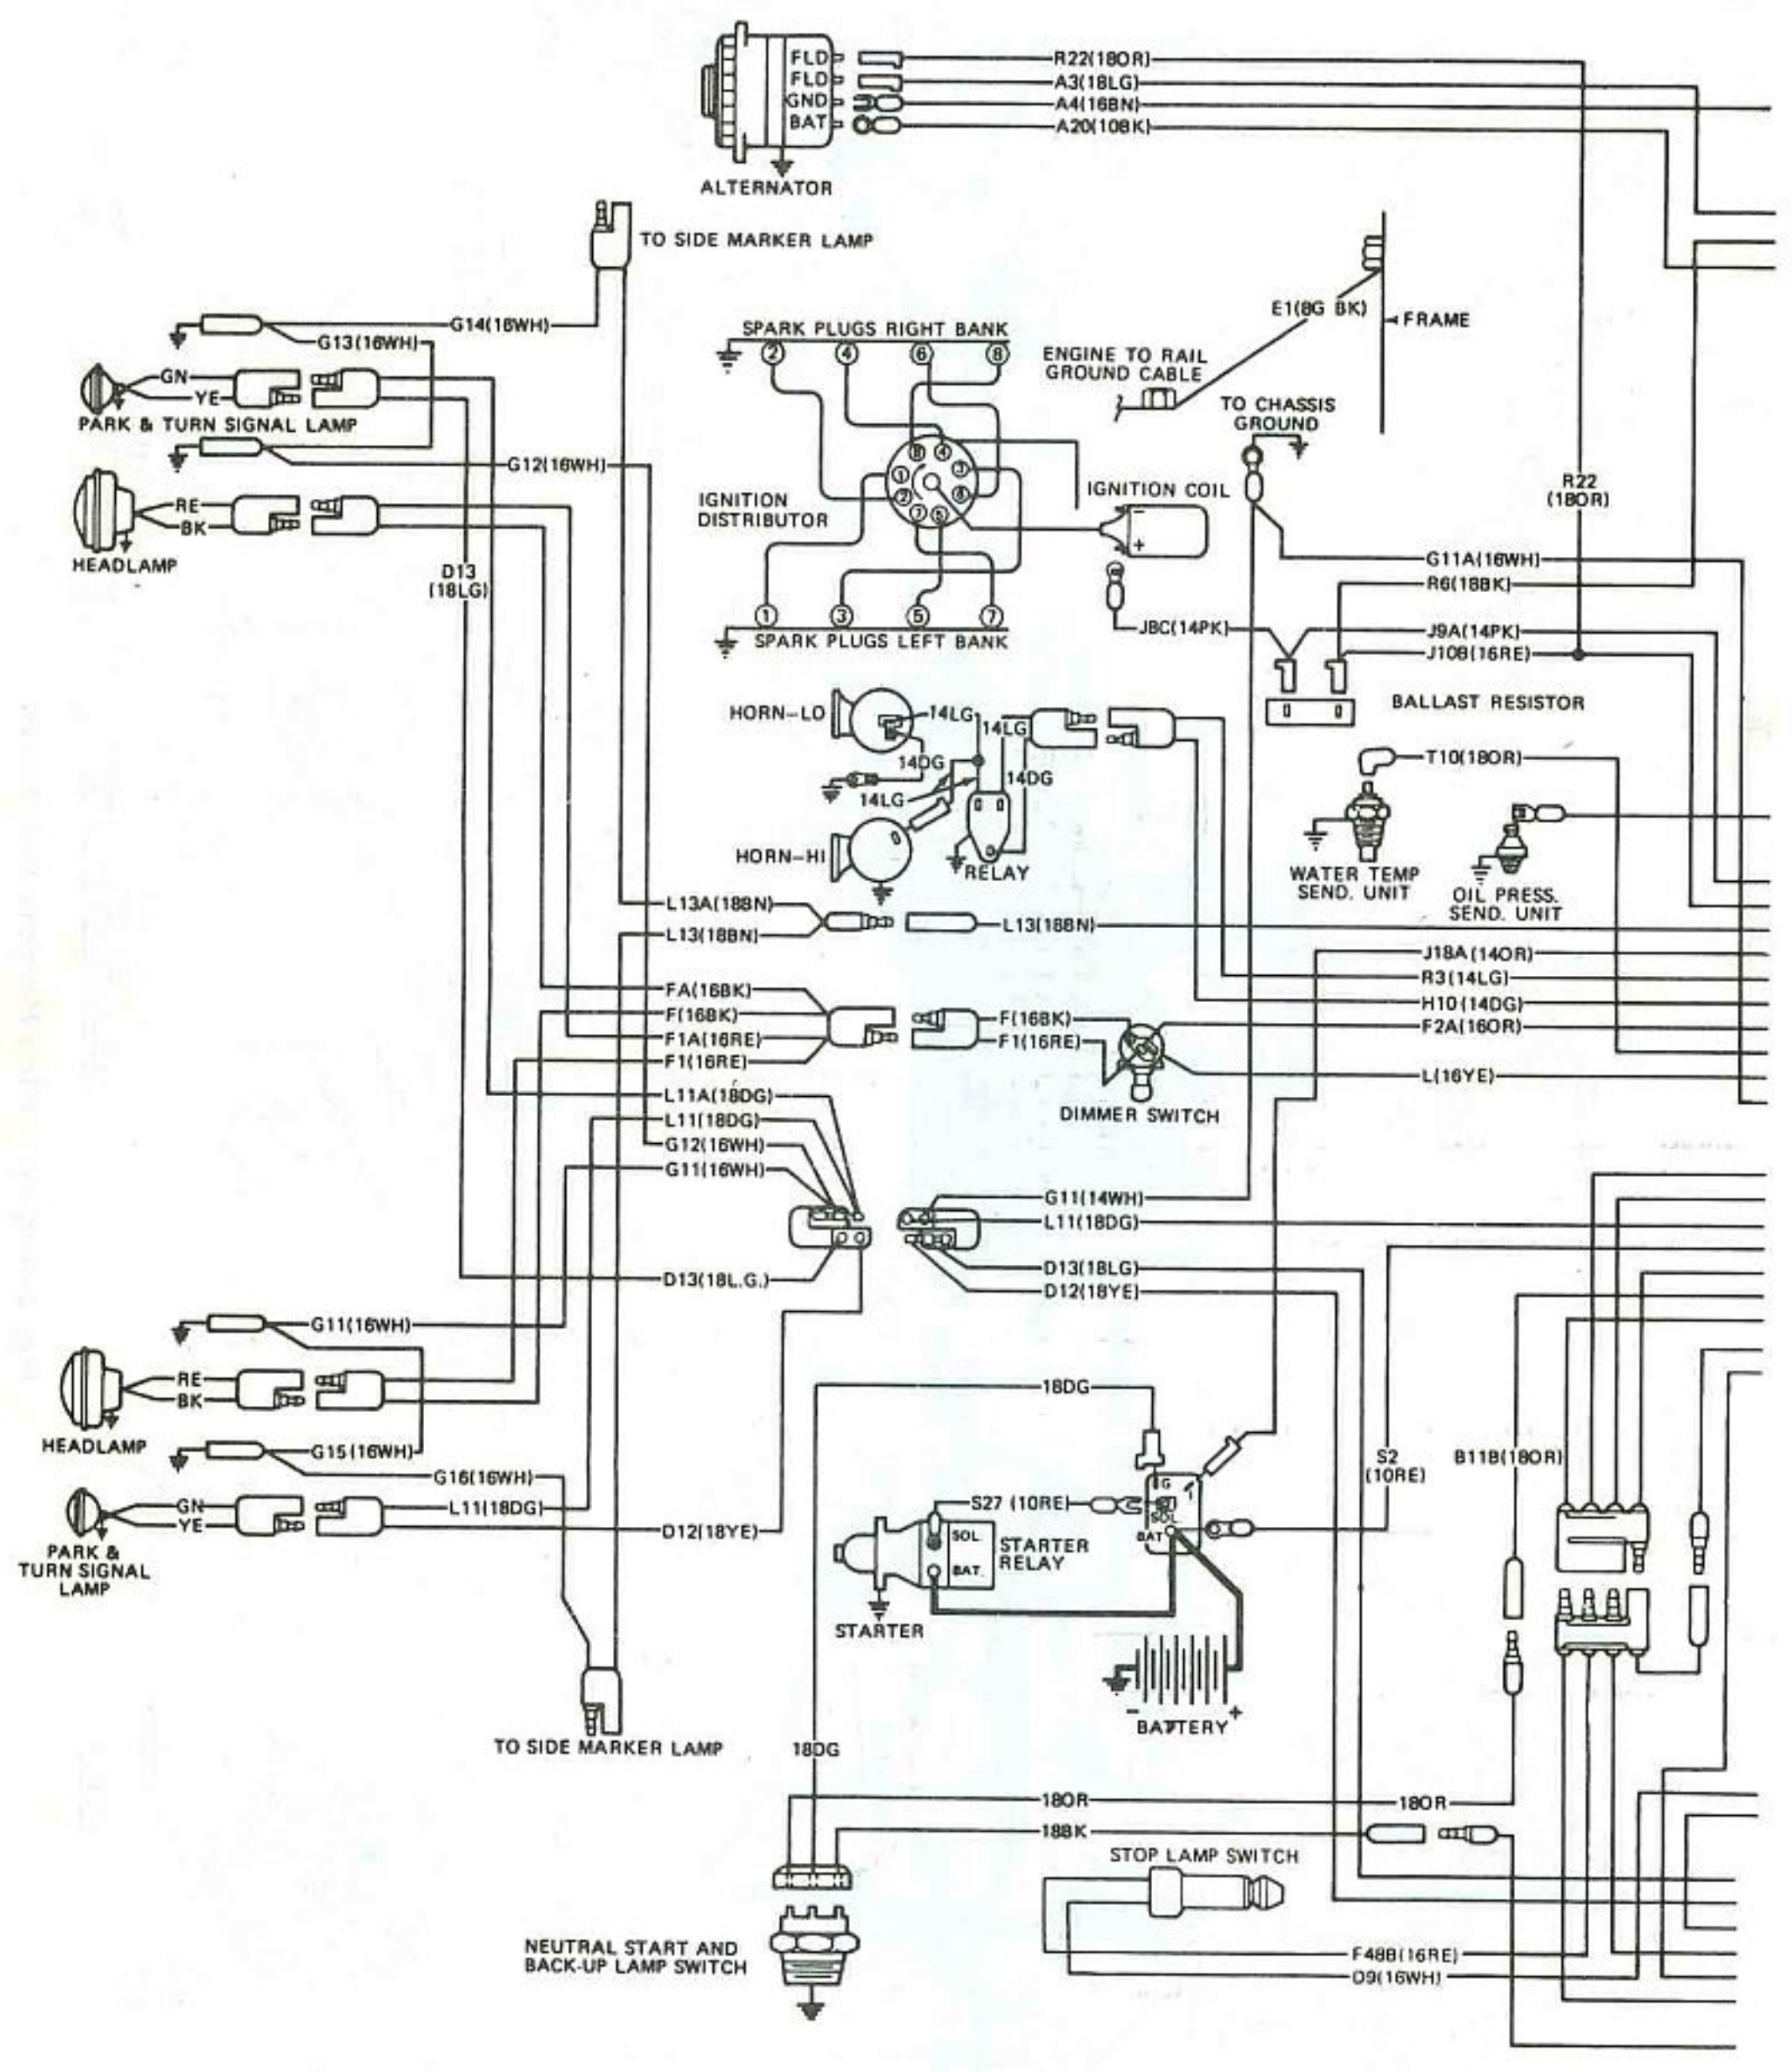
FLD
FLD
GND
BAT
ALTERNATOR
R22(18OR)
A3(18LG)
A4(16BN)
A20(10BK)
TO SIDE MARKER LAMP
G14(16WH)
G13(16WH)
GN
YE
PARK & TURN SIGNAL LAMP
G12(16WH)
RE
BK
HEADLAMP
D13
(18LG)
SPARK PLUGS RIGHT BANK
SPARK PLUGS LEFT BANK
IGNITION DISTRIBUTOR
ENGINE TO RAIL GROUND CABLE
E1(8G BK)
FRAME
TO CHASSIS GROUND
IGNITION COIL
R22
(18OR)
G11A(16WH)
R6(18BK)
JBC(14PK)
J9A(14PK)
J10B(16RE)
BALLAST RESISTOR
HORN-LO
14LG
14DG
HORN-HI
RELAY
T10(18OR)
WATER TEMP SEND. UNIT
OIL PRESS. SEND. UNIT
L13A(18BN)
L13(18BN)
J18A(14OR)
R3(14LG)
H10(14DG)
F2A(16OR)
FA(16BK)
F(16BK)
F1A(16RE)
F1(16RE)
L(16YE)
DIMMER SWITCH
L11A(18DG)
L11(18DG)
G12(16WH)
G11(16WH)
G11(14WH)
D13(18L.G.)
D13(18LG)
D12(18YE)
G15(16WH)
G16(16WH)
18DG
S2
(10RE)
B11B(18OR)
S27 (10RE)
SOL.
BAT.
STARTER RELAY
STARTER
BATTERY
TO SIDE MARKER LAMP
18OR
18BK
STOP LAMP SWITCH
NEUTRAL START AND BACK-UP LAMP SWITCH
F48B(16RE)
D9(16WH)

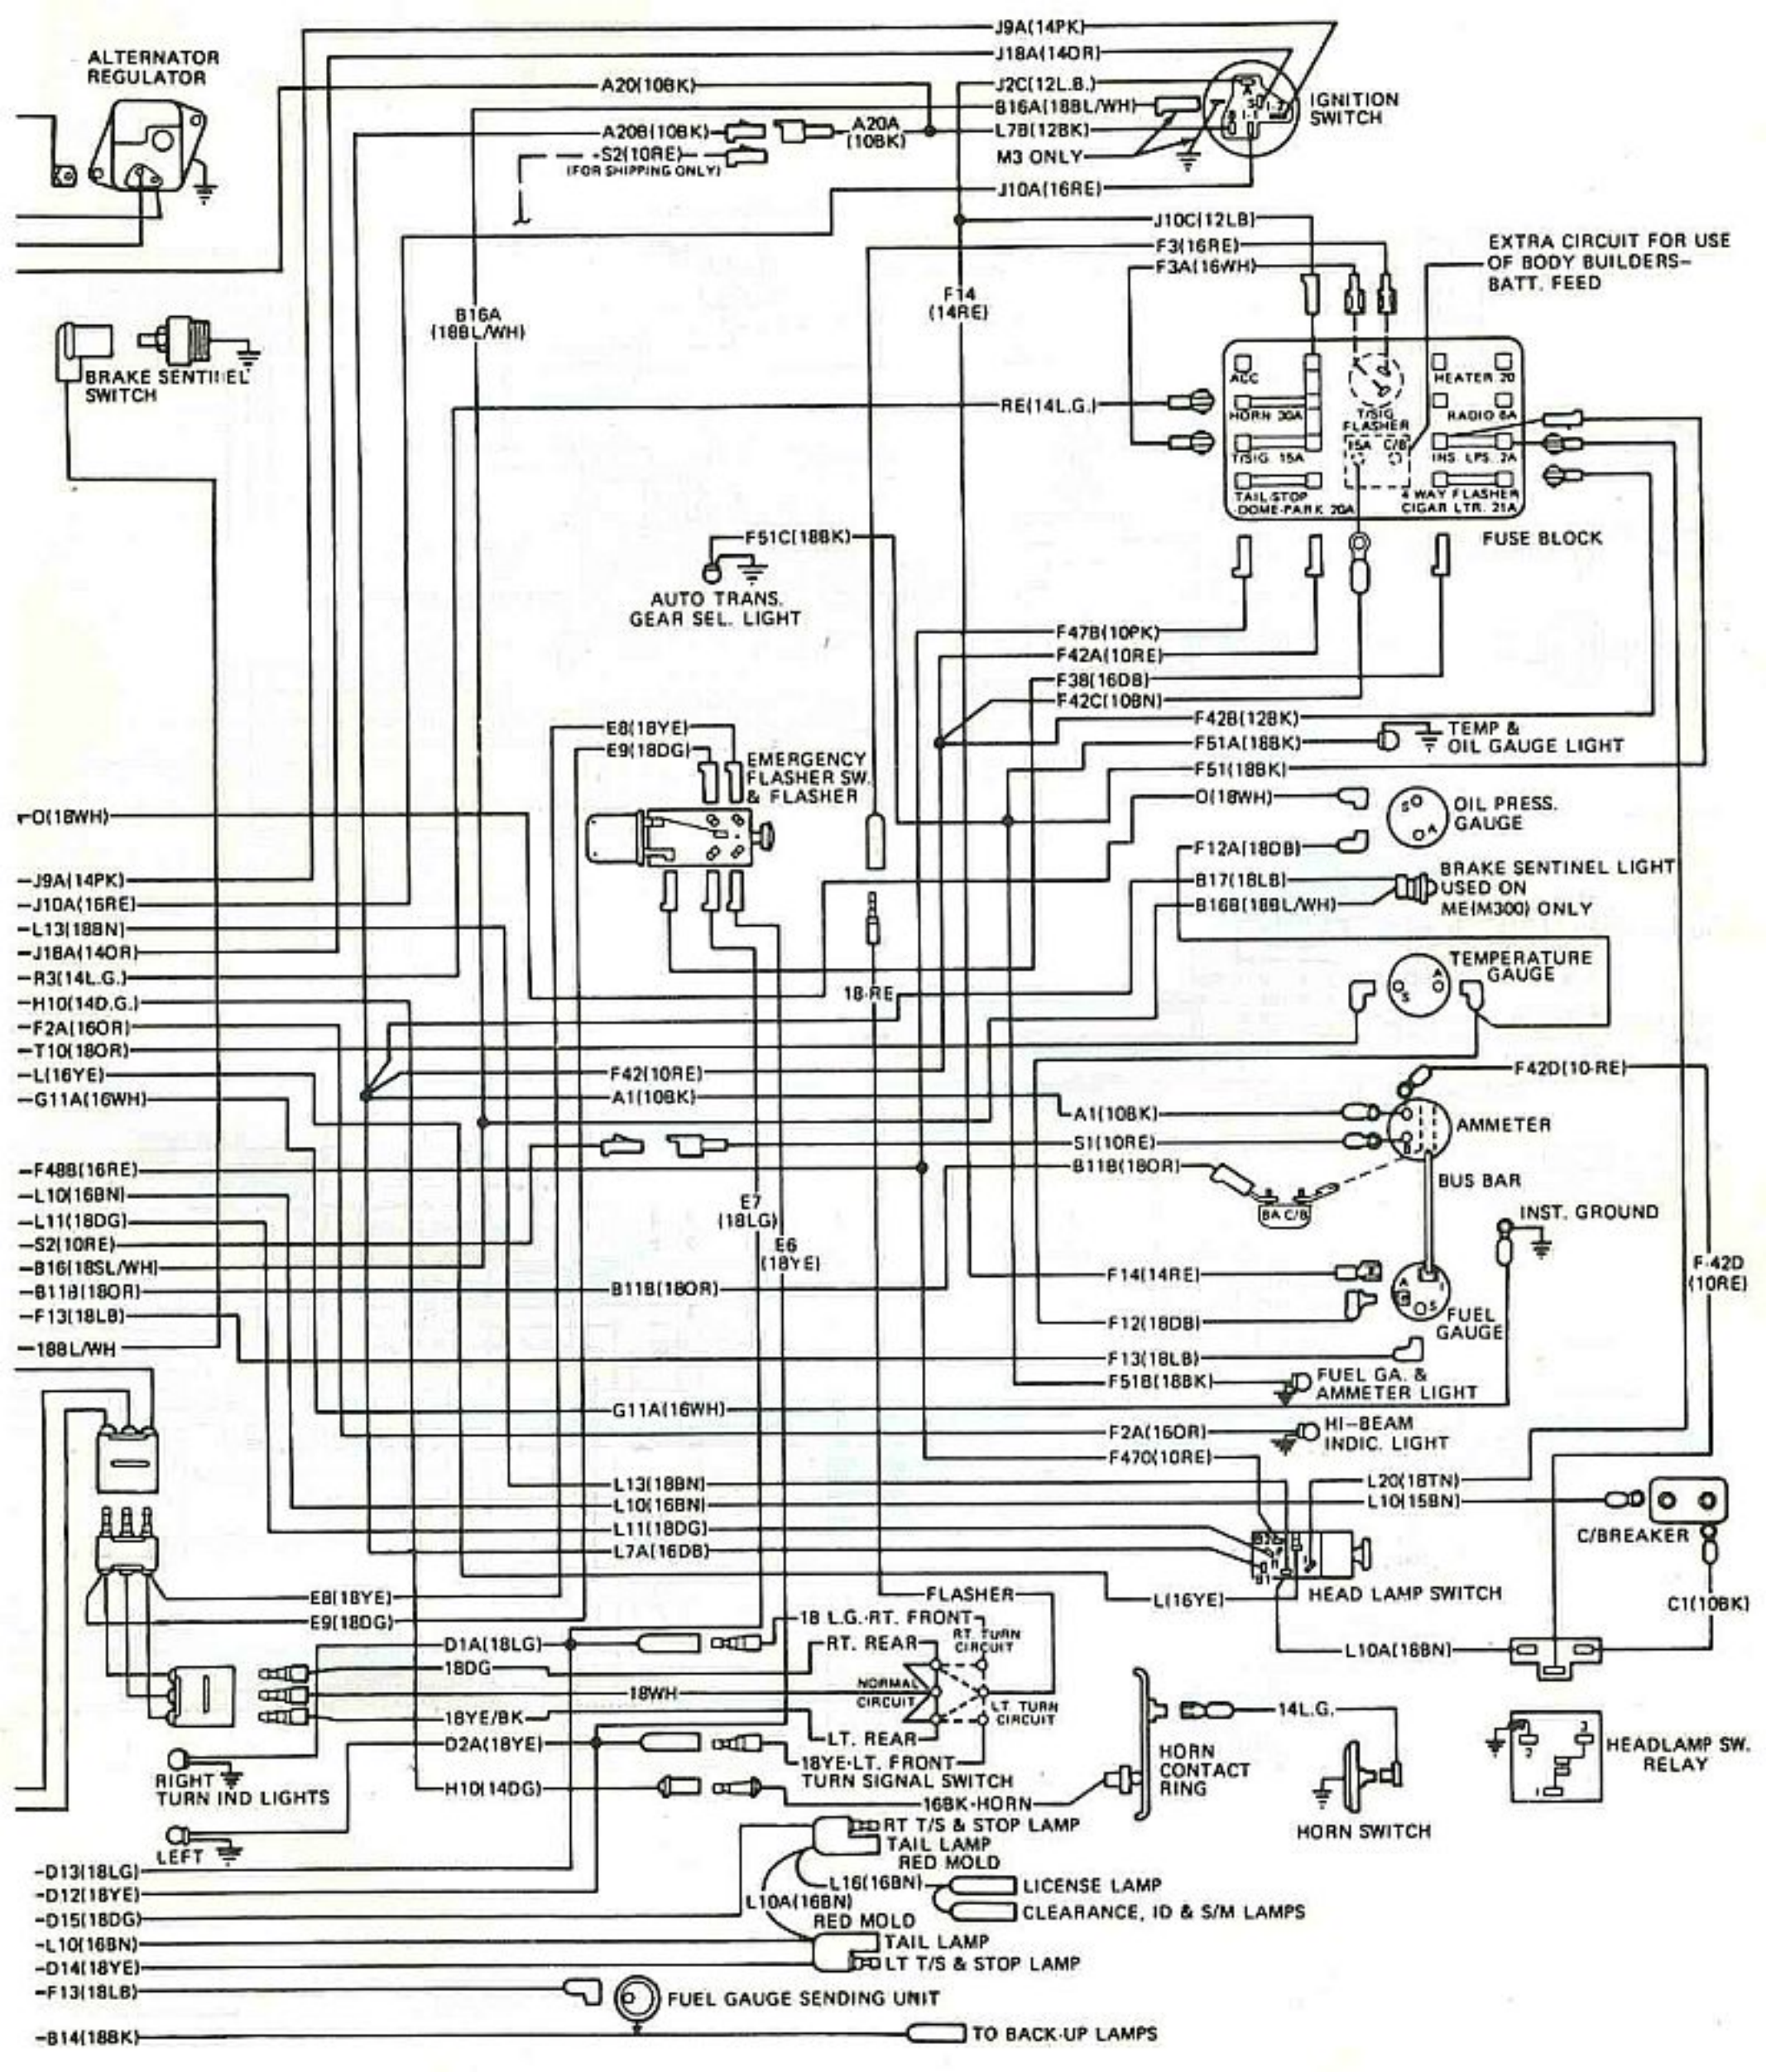
ALTERNATOR REGULATOR
J9A(14PK)
J18A(14OR)
A20(10BK)
J2C(12L.B.)
B16A(18BL/WH)
IGNITION SWITCH
A20B(10BK)
A20A (10BK)
L7B(12BK)
S2(10RE)
(FOR SHIPPING ONLY)
M3 ONLY
J10A(16RE)
J10C(12LB)
F3(16RE)
F3A(16WH)
EXTRA CIRCUIT FOR USE OF BODY BUILDERS-BATT. FEED
B16A (18BL/WH)
F14 (14RE)
BRAKE SENTINEL SWITCH
RE(14L.G.)
ACC
HORN 30A
T/SIG 15A
TAIL-STOP DOME-PARK 20A
T/SIG FLASHER 15A C/B
HEATER 20
RADIO 8A
INS LPS. 2A
4 WAY FLASHER CIGAR LTR. 21A
FUSE BLOCK
F51C(18BK)
AUTO TRANS. GEAR SEL. LIGHT
F47B(10PK)
F42A(10RE)
F38(16DB)
F42C(10BN)
F42B(12BK)
F51A(18BK)
TEMP & OIL GAUGE LIGHT
F51(18BK)
E8(18YE)
E9(18DG)
EMERGENCY FLASHER SW. & FLASHER
O(18WH)
OIL PRESS. GAUGE
F12A(18DB)
B17(18LB)
B16B(18BL/WH)
BRAKE SENTINEL LIGHT USED ON ME(M300) ONLY
TEMPERATURE GAUGE
18-RE
F42D(10-RE)
F42(10RE)
A1(10BK)
AMMETER
S1(10RE)
B11B(18OR)
BUS BAR
8A C/B
INST. GROUND
E7 (18LG)
E6 (18YE)
F14(14RE)
F12(18DB)
FUEL GAUGE
F13(18LB)
F51B(18BK)
FUEL GA. & AMMETER LIGHT
G11A(16WH)
F2A(16OR)
HI-BEAM INDIC. LIGHT
F47C(10RE)
L13(18BN)
L10(16BN)
L11(18DG)
L7A(16DB)
L20(18TN)
L10(15BN)
C/BREAKER
C1(10BK)
HEAD LAMP SWITCH
L(16YE)
L10A(16BN)
FLASHER
18 L.G.-RT. FRONT
RT. REAR
RT. TURN CIRCUIT
NORMAL CIRCUIT
LT. TURN CIRCUIT
LT. REAR
18YE-LT. FRONT
TURN SIGNAL SWITCH
D1A(18LG)
18DG
18WH
18YE/BK
D2A(18YE)
H10(14DG)
16BK-HORN
HORN CONTACT RING
14L.G.
HORN SWITCH
HEADLAMP SW. RELAY
RIGHT TURN IND LIGHTS
LEFT
RT T/S & STOP LAMP
TAIL LAMP
RED MOLD
L16(16BN)
LICENSE LAMP
CLEARANCE, ID & S/M LAMPS
L10A(16BN)
RED MOLD
TAIL LAMP
LT T/S & STOP LAMP
FUEL GAUGE SENDING UNIT
TO BACK-UP LAMPS
F42D (10RE)
-O(18WH)
-J9A(14PK)
-J10A(16RE)
-L13(18BN)
-J18A(14OR)
-R3(14L.G.)
-H10(14D.G.)
-F2A(16OR)
-T10(18OR)
-L(16YE)
-G11A(16WH)
-F48B(16RE)
-L10(16BN)
-L11(18DG)
-S2(10RE)
-B16(18BL/WH)
-B11B(18OR)
-F13(18LB)
-18BL/WH
-D13(18LG)
-D12(18YE)
-D15(18DG)
-L10(16BN)
-D14(18YE)
-F13(18LB)
-B14(18BK)